


# CONFIGURATION MODE FLOWCHART 1 OF 2

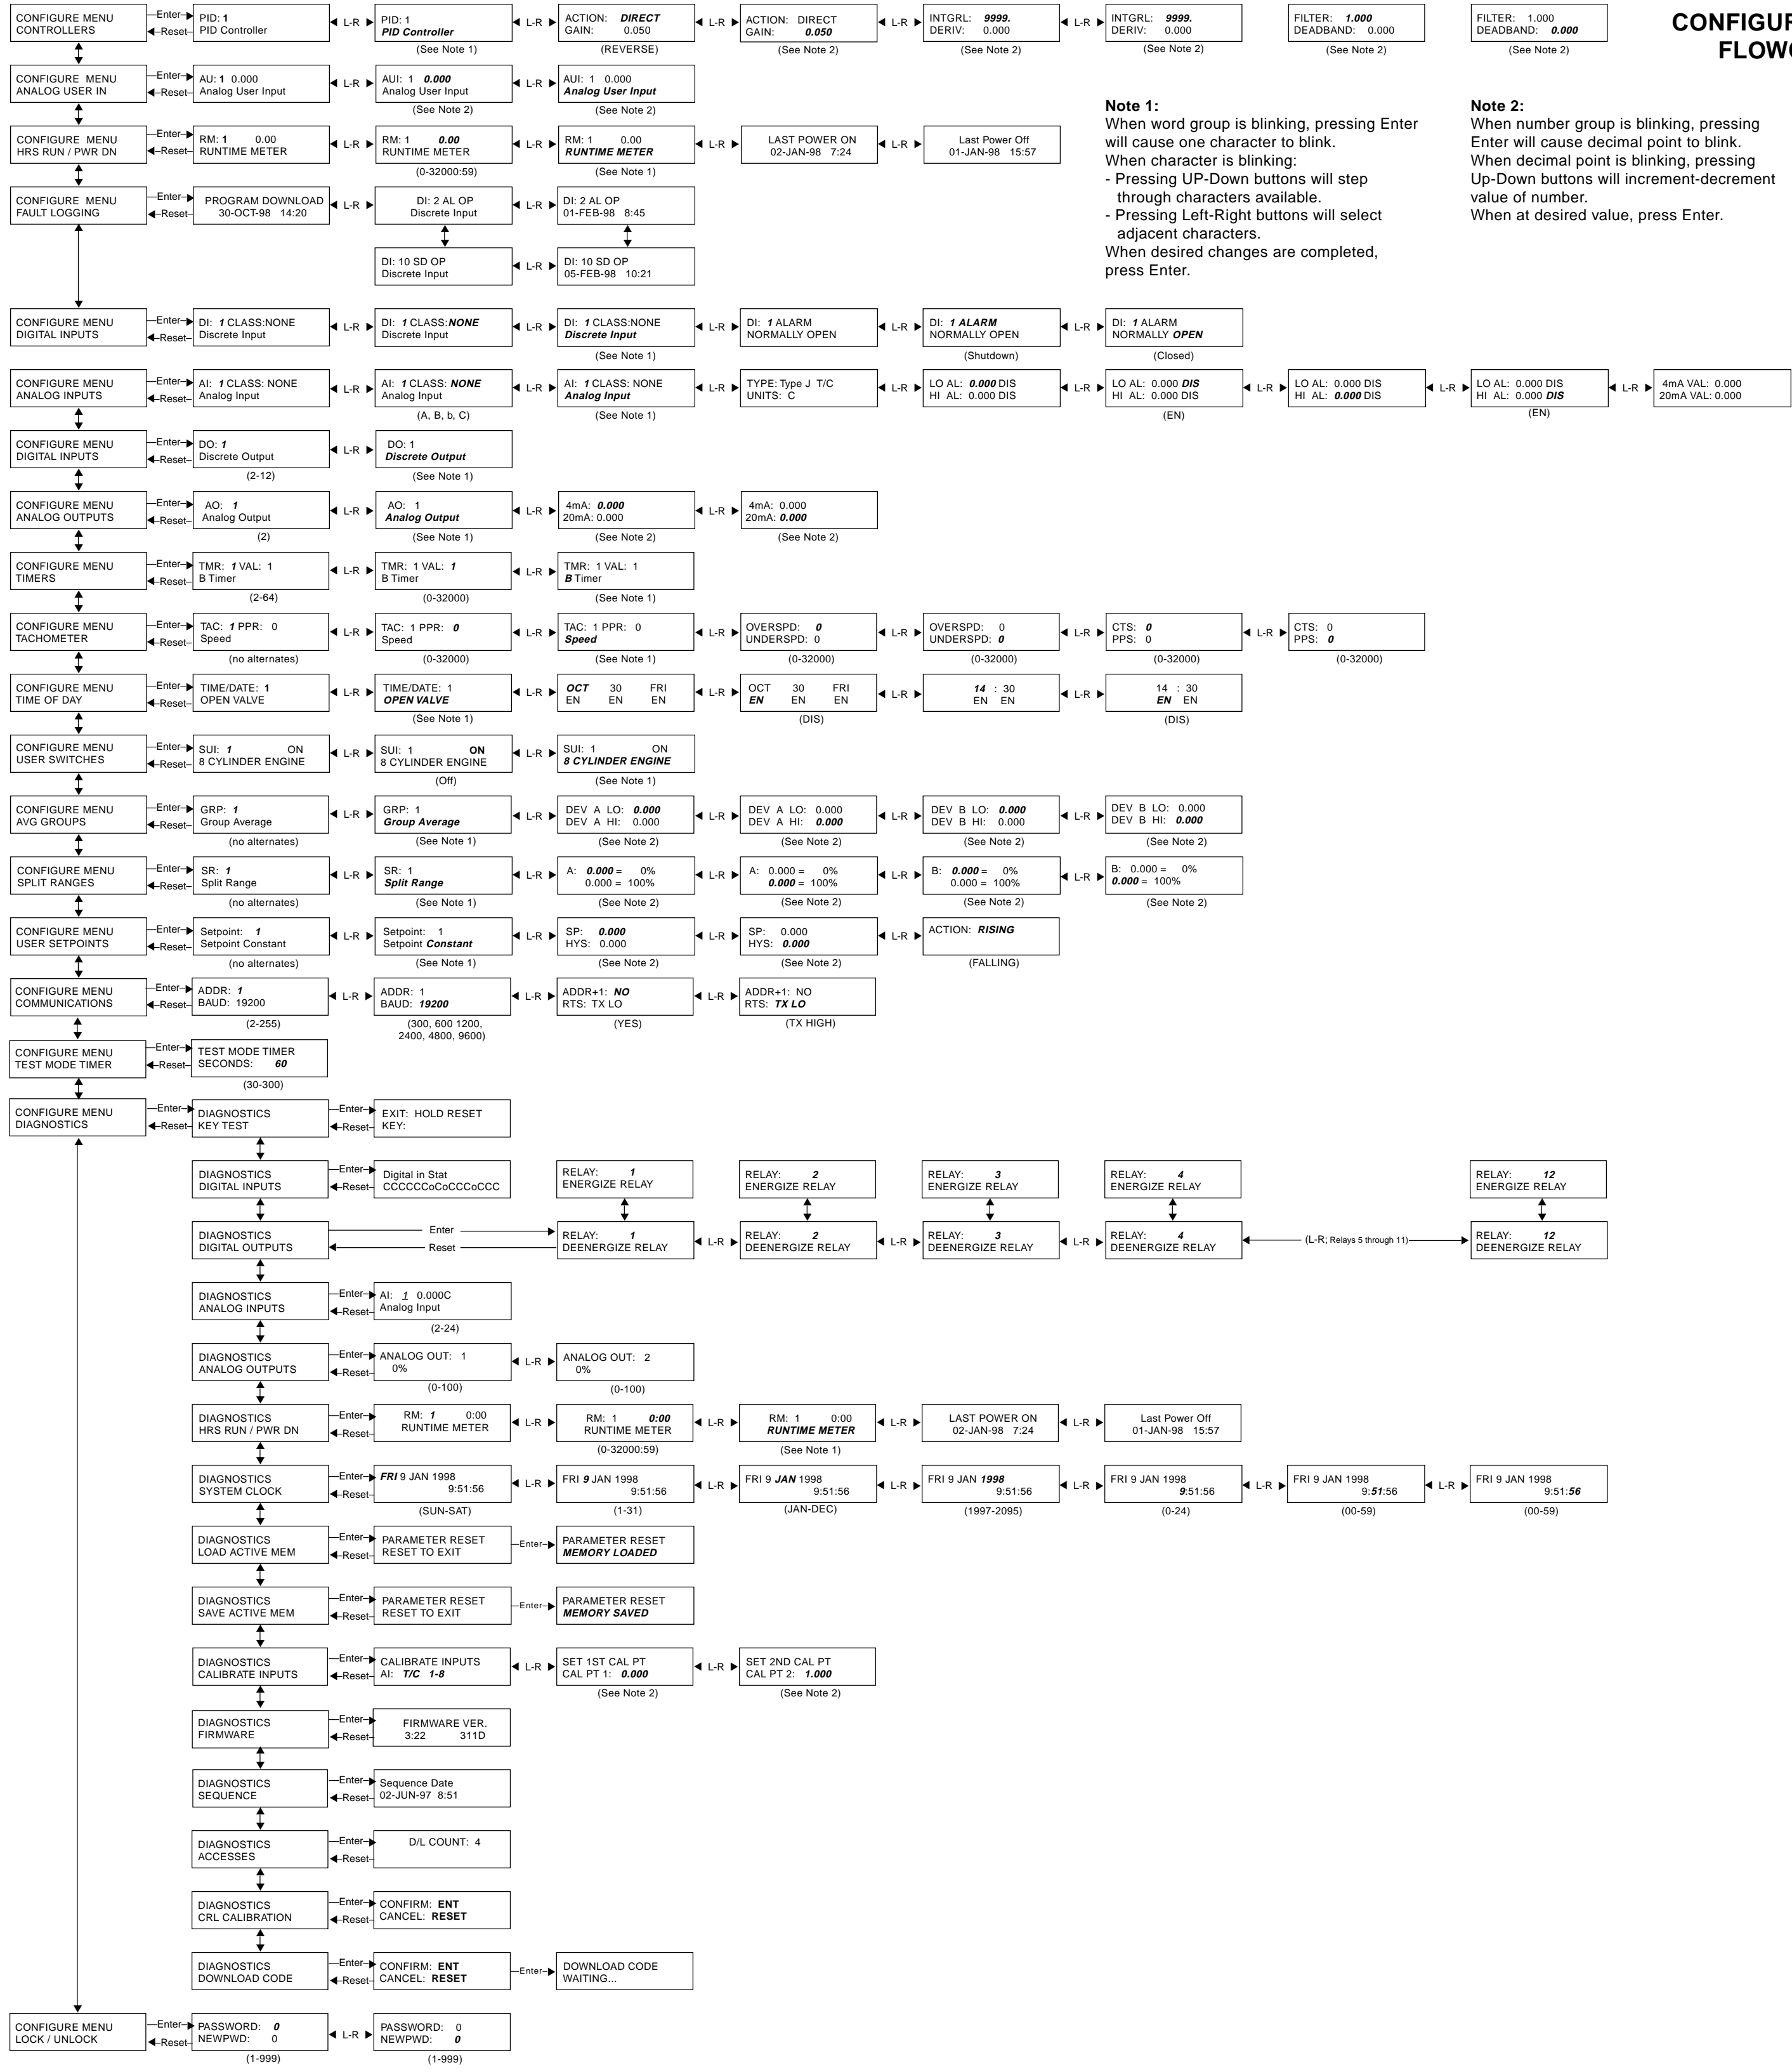

**Note 1:**  
 When word group is blinking, pressing Enter will cause one character to blink.  
 When character is blinking:  
 - Pressing UP-Down buttons will step through characters available.  
 - Pressing Left-Right buttons will select adjacent characters.  
 When desired changes are completed, press Enter.

**Note 2:**  
 When number group is blinking, pressing Enter will cause decimal point to blink.  
 When decimal point is blinking, pressing Up-Down buttons will increment-decrement value of number.  
 When at desired value, press Enter.